

▪ USB/Disc update for BD500's

LG_BD_5x00B30.ROM-00 and LG_BD_5x00B30.ROM-01 are update files for Main Software.

Step 1: Creating Separate Firmware Update Device

You can create a firmware update files on your own media by saving them in the USB memory device or in CD/DVD.

[Option A] Creating a Firmware Update USB Device

To create a firmware update in a USB memory device, copy the update file(s) to the USB device.

Preparation: The USB memory device should have at least 100MB of freespace to save the firmware update files.

1. Insert a USB memory device into the PC.
2. Copy the latest version of firmware update files to the USB drive. (You do not need to create directory, the files will be saved in the root directory.)

[Option B] Creating a Firmware Update CD/DVD

 
To create a firmware update in a CD/DVD, write the update file(s) to the CD+R/RW or DVD±R/RW disc using CD burning software.

Preparation: To create a firmware update CD/DVD, prepare the following items according to your storage media:

CD	-CD-RW drive and CD burning software. (Both must be installed in your PC to create a firmware update CD.) -Blank recordable CD-R or CD-RW disc.
DVD	-DVD-RW drive and DVD burning software. (Both must be installed in your PC to create a firmware update DVD) -Blank recordable DVD-R, DVD-RW, DVD+R, or DVD+RW disc.

▪ USB/Disc update for BD500's

1. Insert a blank recordable CD/DVD-R, CD/DVD-RW, DVD+R, or DVD+RW disc into the CD/DVD-RW drive.
2. Run the CD/DVD burning software, and select the [CD Data] or the [Burn DVD Data] option on the program.
3. Write the firmware update file(s) in the root directly of CD/DVD. For details, follow the operating instructions provided by the CD/DVD burning software provider.

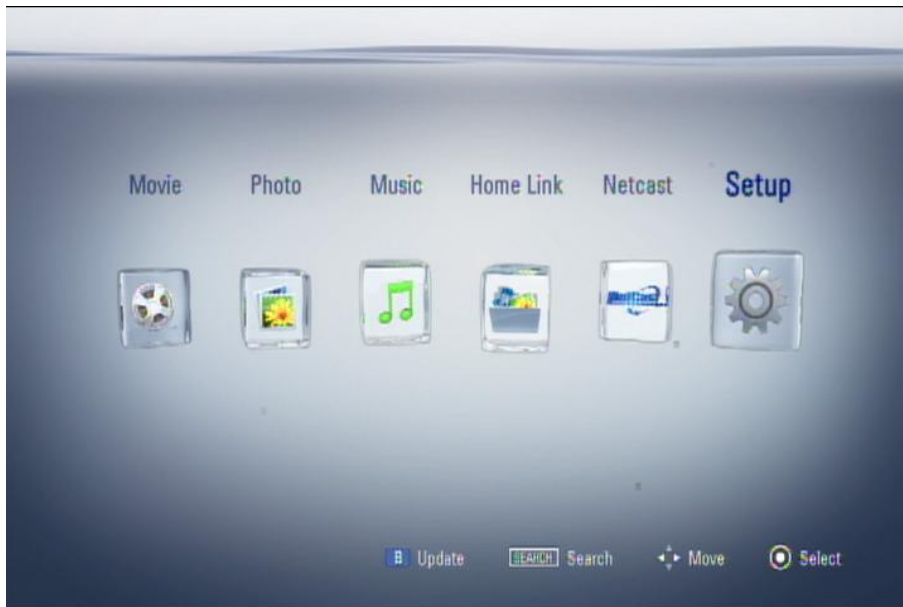


- ① Turn on the player and wait until the Home Menu appears.
- ② Insert USB memory or CD/DVD disc that contains the update file(s) of the latest firmware version into the player.

-USB memory device: Insert the USB memory device to a USB port on the front panel of the player.


-CD/DVD: Press OPEN/CLOSE button to open the disc tray. Load the disc and press OPEN/CLOSE button to close the disc tray.

 ▪ USB/Disc update for BD500's

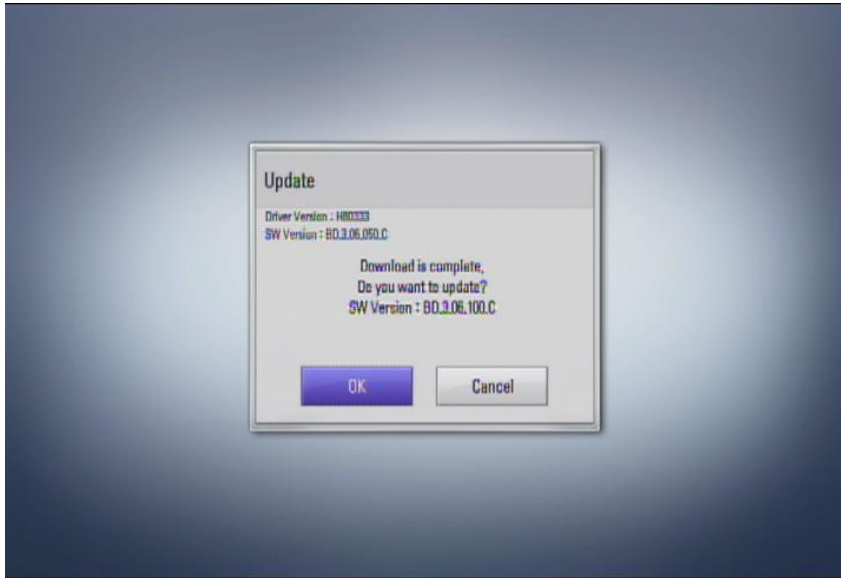

③ The UPDATE window appears displaying the versions of current firmware in white, and the versions saved in the USB memory device or CD/DVD in BD500's.

 
④ Select OK to start updating

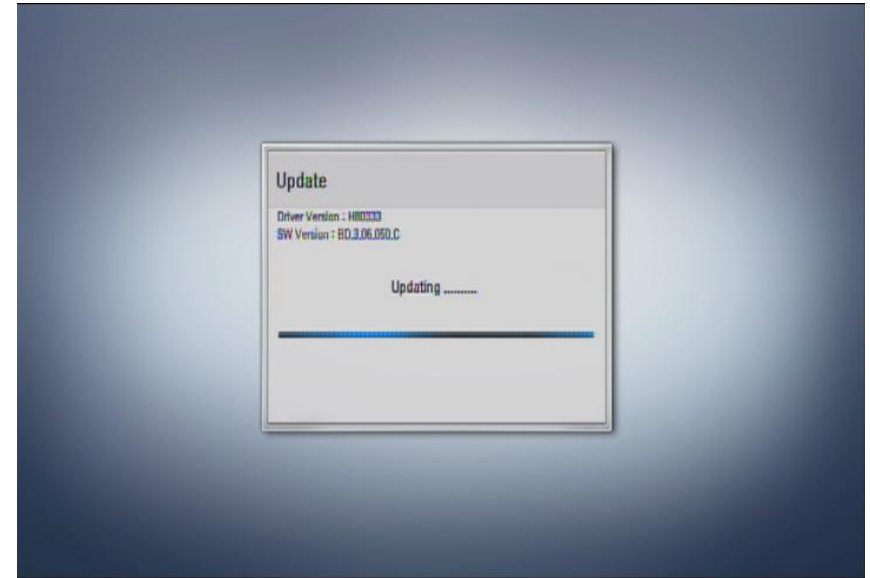

⑤ Press ENTER on the remote control or press Play on the player to start the update. A status bar shows the progress of the firmware update. -Updating Main Software will take about 3 minutes. -Updating Driver will take about 1 minute. -Updating both Main Software and Driver will take about 4 minutes. Please be patient during the software update!

Caution : Do not turn off the power during firmware update

 ▪ USB/Disc update for BD500's

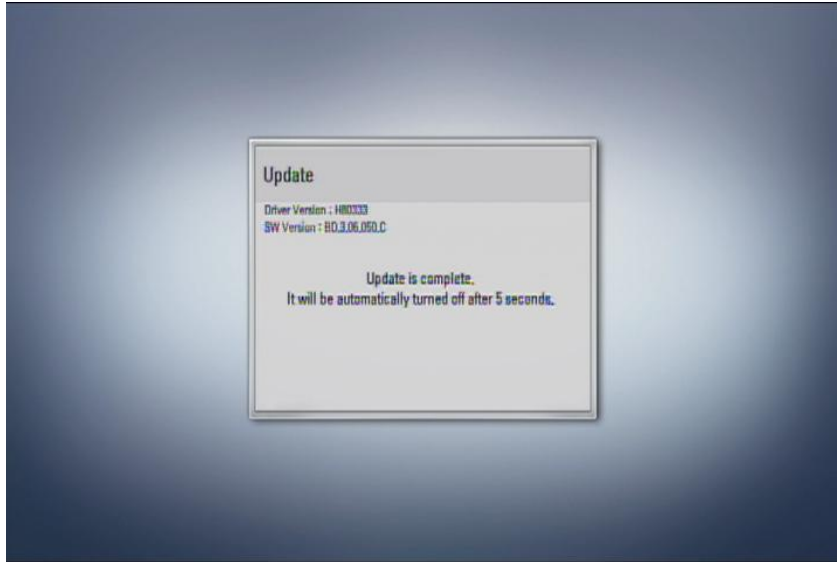

⑥ When update is completed, the message, "Update is complete." will appear, and the power will turn off automatically after 5 seconds.

⑦ Turn the power back on. The system now operates with the new version.